

## ASSEMBLY INSTRUCTIONS MIXER TABLE ML-19564 FOR A120 or A200 MIXERS

This instruction describes the assembly and lists the parts needed for the mixer table.

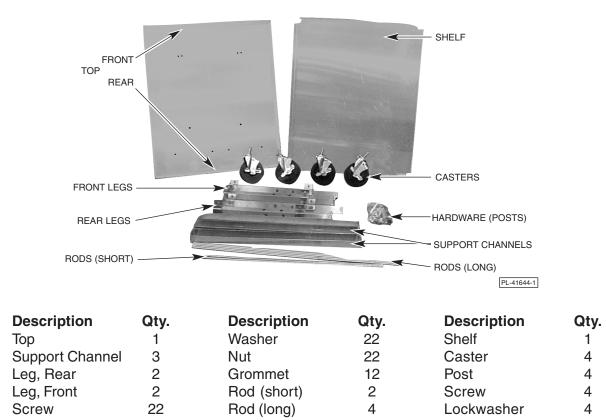

- 1. Remove all protective film from top and shelf.
- 2. Lay top on flat surface with underside up. Install the three support channels; match up holes in support channels to holes in underside of top, with six  $1/4-20 \times 1/2^{\circ}$  screws, washers and nuts.

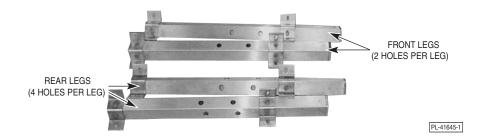

3. Loosely attach three legs, two rear and one front, to the underside of top with six  $1/4-20 \times 1/2^{\circ}$  screws, washers and nuts.



## MIXER TABLE ML-19564 (cont)

- 4. Install casters into bottom of legs.
- 5. Install 14 grommets into holes in legs.
- 6. Install rods (longer on sides, shorter on rear) into loosely installed legs. Lubricate rod ends to make installation easier. Tighten all screws.
- Install shelf onto three leg brackets with six <sup>1</sup>/<sub>4</sub>-20 x <sup>1</sup>/<sub>2</sub>" screws, washers and nuts.
- 8. Install rods into remaining leg.
- 9. Attach leg onto shelf and underside of top using four  $1/4-20 \times 1/2^{"}$  screws, washers and nuts.
- Place table on its side and install four posts to top at rear of top with four <sup>3</sup>/<sub>8</sub>-16 x <sup>3</sup>/<sub>4</sub>" screws and lockwashers.



11. Turn table upright.

